



ТОТ САМЫЙ
МАГАЗИН

[Пневматические пистолеты Borner C41 Blowback 4.5 мм](#)
[120 м/с \(216-9100\): Инструкция пользователя](#)

Выбрать

BORNER

BORNER C41



EN Operating instructions

BORNER C41

CO2-Pistol, cal. 4,5 mm (.177) BB.

This air gun is not a toy. Treat it with the same respect as if you would treat a firearm.

Always carefully follow the safety instructions found in this owner's manual and keep this manual in a safe place for further use.

Safety instructions:

Before using the gun read carefully the following instructions. Buyers and owners must follow the instructions for the safe use of airguns. Keep the safety instructions during the whole period of operation and maintenance.

This item is destined for sportful shooting. The item outward similarity with a fire piece is obliged you to take extra safety considerations. Do not brandish or display this airgun in public. Police officers and other people might consider you having a firearm.

Always load the item immediately before shooting. Always treat a weapon as if it was loaded and ready to shoot. Safety shooting glasses should always be worn when firing the weapon.

Prohibited activities:

- *Always treat a gun as if it was loaded.*
- *Never aim your airgun at persons or animals.*

- *Avoid ricochets. Never fire at smooth, hard surfaces or water.*
- *Do not leave equipment unattended.*
- *The gun together with its operating instructions may only be handed over to persons who have reached the age of 18 (or older) and who are fully familiar with the handling of it.*
- *Modifications or repairs of guns are only to be effected by authorized agencies or by a skilled gunsmith.*
- *Don't use the item in the idle mood (without gas cylinder).*
- *Keep out of reach of children.*
- *Never transport a loaded gun. Only load your gun when you intend to fire it. For storage remove gas cylinder.*
- *Only use flawless BBs: Never use the following BBs: with edges, both halves not aligned, used, soiled, or deformed. Warranty expires if non recommended BB are used.*
- *Don't operate technically defective items.*
- *Safety shooting glasses should always be worn when firing the gun.*
- *Don't tighten a screw of the gas cylinder (no pressure more than 1KG/CM²).*
- *Carefully make sure that your hands do not get in touch with discharged CO² gas. This may cause freezing of the skin.*
- *Do not expose the CO² cylinder to excessive heat and do not store it at temperatures exceeding 50°C.*



It is possible that certain conditions may affect the item, which can impact its proper performance. These conditions include the usage and maintenance the item at temperatures lower than 10°C. Another condition may be when the airgun is fired rapidly (more than 1 shot in 3 seconds).

Air gun C41



TECHNICAL DATA

Model:	Borner C41
Caliber/Ammo:	cal. 4,5 mm (.177) steel BB
Case material:	metal alloy
System:	CO ² -Pistol
Projectiles:	Steel BBs
Magazine capacity:	18 BBs
Energy:	< 3,0 Joule
Velocity:	120 m/s
Weight:	900 g

Complete equipment :

Pistol Borner C41

Instruction



The parts of Your Air Pistol:

- 1 Pistol grip cover
- 2 Magazine
- 3 Magazine release
- 4 Trigger
- 5 Rear sight
- 6 Front sight
- 7 Cylinder retention screw
- 8 Magazine follower
- 9 Opening for loading (at the back of the magazine).
- 10 Safety

Safety



OFF SAFE



ON SAFE

 
Preparation for use




Put the safety on "SAFE" (9) and remove grip cover rearward exposing the CO² housing (1). Unscrew cylinder retention screw (7).



Insert the cylinder CO². Tighten cylinder retention screw (7). Replace grip cover (1). Press magazine release lever (3) and remove the magazine (2).

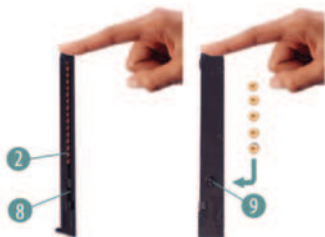

 Pull down and lock magazine follower (8).
Load BBs.

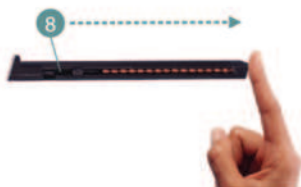


Load up to 18 (.177 caliber) steel BBs through the loading port covering with your finger the upper part of the magazine, unlock magazine follower (8).



It is strictly prohibited to load the magazine through the upper loading port of the magazine.

 Aiming pointing

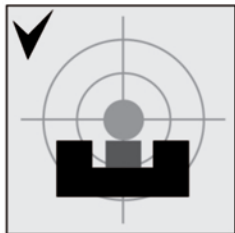

The air pistol is correctly aimed when the front sight blade is positioned exactly in the notch and even with the rear sight. The top of the front sight blade should be even with the top of the notch in the rear sight. The bulls eye should appear to rest on the top of the front sight.

Shooting

The pistol is ready to fire. When you are sure of your target and backstop, and the area around the target is clear, take the airgun "OFF SAFE" and pull the trigger to fire.

Games Men Play



FOR NOTES

FOR NOTES

Air gun
C41



BORNER[®]
Central Borner Company Inc.

CBC Inc.,
Miami, Florida 33155, USA
Goods are certified

We reserve the right to make color and design changes and technical improvements. No responsibility is accepted for printing errors or incorrect information.

© Central Borner Company Inc.

Обратите внимание!



[Фонари](#)



[Мангалы, грили, барбекю](#)



[Рации](#)



[Ножи туристические,
тактические](#)



[Подзорные трубы](#)



[Тактическая одежда](#)



[Термосы и термокружки](#)



[Мультитулы и
многофункциональные ножи](#)



[Пули и патроны для
пневматики](#)



[Зажигалки](#)



[Аксессуары к пневматике](#)



[Сейфы](#)



[Средства по уходу за
оружием](#)



[Котелки и другая
туристическая посуда](#)



[Кобуры и сумки-кобуры для
пистолетов](#)



[Автономные
видеорегастраторы для
охоты](#)



[Коробки для патронов](#)